



2006-2008



oil and filter service – every 6 months/8,000 km

- Replace engine oil & filter
- Remove & inspect air filter element (replace when required)
- Lubricate locks, latches & hinges
- Inspect lights, horn & wipers for proper function
- Inspect coolant, brake & washer fluid levels
- Inspect tires & adjust pressure as required (including spare), rotate tires if needed

For minimum maintenance requirements and applicable Special Operating Conditions, please refer to your Owner's Manual Supplement.

Rotate tires every 12 months/16,000 km or sooner if required. The appropriate interval depends on factors such as vehicle design, winter tire usage, driving habits and road conditions.



maintenance service – every 12 months/16,000 km

- Replace engine oil & filter
- Remove & inspect air filter element (replace when required)
- Lubricate locks, latches & hinges
- Inspect lights, horn & wipers for proper function
- Inspect coolant, brake, washer fluid, automatic transmission & hybrid transaxle fluid levels
- Inspect drive belts for damage. Adjust belt tension if required
- Inspect steering gear box, linkage and suspension parts for looseness, damage or leakage
- Inspect ball joints & dust covers, drive shaft and steering rack boots, chassis nuts & bolts for looseness or damage
- Tighten driveshaft bolts (Highlander Hybrid, RAV4)
- Inspect brake linings, drums, pads, discs, lines and hoses
- Inspect exhaust system for leaks or damage
- Inspect tires & adjust pressure as required (including spare), rotate tires if needed
- Road test

We service your Toyota the way we built it.